


Pressure-Temperature Nomograph

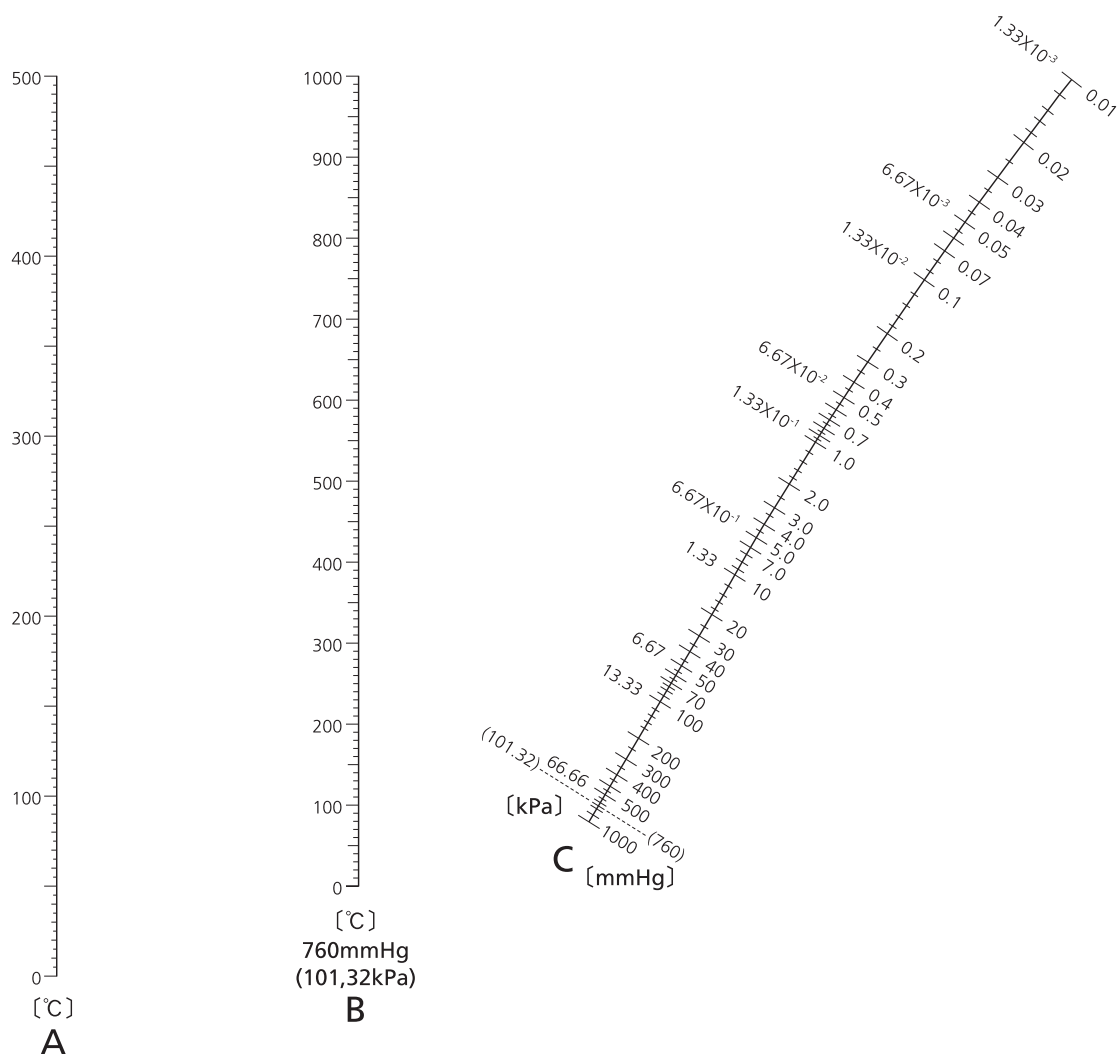

● How to calculate the bp under atmospheric pressure from bp under reduced pressure

- ① Connect a degree on the line C and its corresponding bp on the line A under reduced pressure using a straight line.
- ② An intersection found by step ① on the line B serves as an approximate bp in atmospheric pressure.

*This nomograph applies to nonassociated solvent.

Since the bp obtained from this nomograph is an approximate value, it is not an exact bp.

出典: Science of Petroleum, Vol.II, p.1281 (1938).